



## Ingombri minimi

### NUMERO BRACCI

SPORGENZA BRACCIO	NUMERO BRACCI			
	2 BRACCI	3 BRACCI	4 BRACCI	6 BRACCI
165	212	306	401	590
215	262	381	501	756
265	312	456	616	906
315	377	547	716	1056
365	427	622	816	1206

## Numero staffe


### LARGHEZZA TENDA

SPORGENZA BRACCIO	LARGHEZZA TENDA															
	240	300	360	410	480	540	600 *	650 *	700 *	800 *	900 **	1000 **	1100 **	1200 ***	1300 ***	1400 ***
NUMERO STAFFE																
165	2	2	3	3	3	4	4	7	7	8	8	9	9	12	12	13
215	2	2	3	3	3	4	4	7	7	8	8	9	9	12	12	13
265	-	2	3	4	4	4	4	7	7	8	8	9	9	12	12	13
315	-	-	4	4	4	5	5	7	7	8	8	9	9	12	12	13
365	-	-	-	4	4	5	5	7	7	8	8	9	9	12	12	13


\* 1 supporto compensatore    \*\* 2 supporti compensatore    \*\*\* 3 supporti compensatore

## Dimensioni della tenda chiusa \*\*

installazione a parete o a soffitto

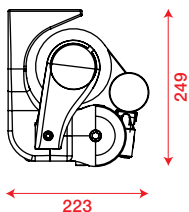


Inclinazione minima 5°

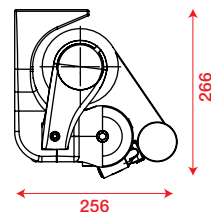


Inclinazione massima 65°

## Staffe \*\*

installazione a parete

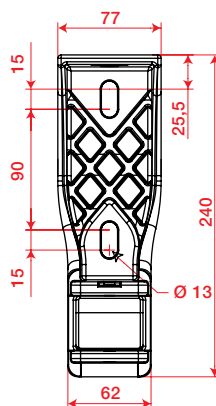


installazione a soffitto

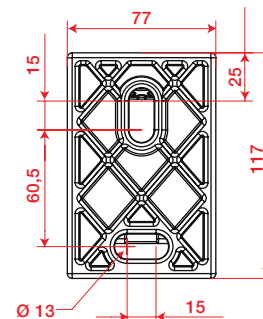

## Lunghezza del braccio e inclinazione

installazione a parete o a soffitto

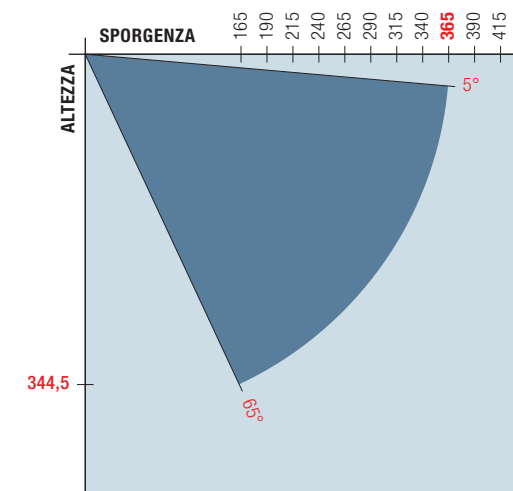

## Caratteristiche tecniche

