



Ingombri minimi

NUMERO BRACCI

SPORGENZA BRACCIO	NUMERO BRACCI			
	2 BRACCI	3 BRACCI	4 BRACCI	6 BRACCI
165	212	306	401	590
215	262	381	501	756
265	312	456	616	906
315	377	547	716	1056
365	427	622	816	1206

Numero staffe


LARGHEZZA TENDA

SPORGENZA BRACCIO	LARGHEZZA TENDA															
	240	300	360	410	480	540	600 *	650 *	700 *	800 *	900 **	1000 **	1100 **	1200 ***	1300 ***	1400 ***
NUMERO STAFFE																
165	2	2	3	3	3	4	4	7	7	8	8	9	9	12	12	13
215	2	2	3	3	3	4	4	7	7	8	8	9	9	12	12	13
265	-	2	3	4	4	4	4	7	7	8	8	9	9	12	12	13
315	-	-	4	4	4	5	5	7	7	8	8	9	9	12	12	13
365	-	-	-	4	4	5	5	7	7	8	8	9	9	12	12	13


* 1 supporto compensatore ** 2 supporti compensatore *** 3 supporti compensatore

Dimensioni della tenda chiusa **

installazione a parete o a soffitto

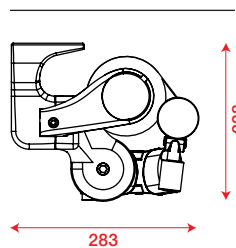


inclinazione minima 5°

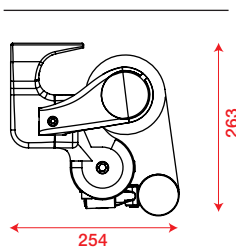


inclinazione massima 85°

Staffe **

installazione a parete

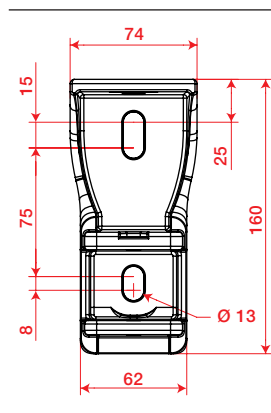


installazione a soffitto

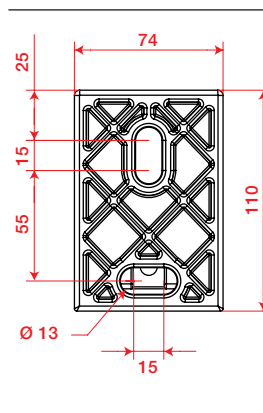

Lunghezza del braccio e inclinazione

installazione a parete o a soffitto

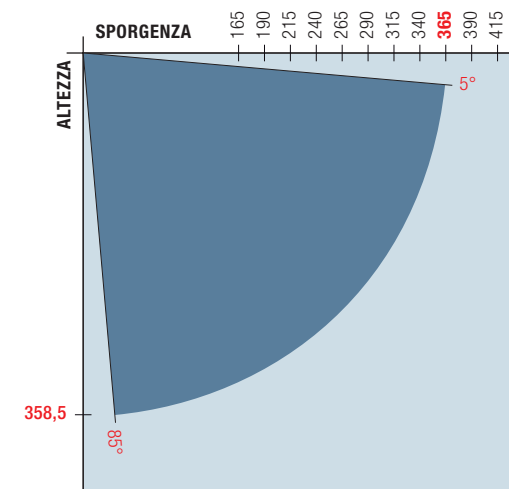

Caratteristiche tecniche

